



MARCH PUMPS

**1819 PICKWICK AVE., GLENVIEW, IL 60026-1306, U.S.A.
PHONE: (847) 729-5300 - FAX: (847) 729-7062
WWW.MARCHPUMP.COM**

DESCRIPTION: March 830 hot water booster series are centrifugal magnetic drive pumps built to handle liquid transfer in heating and cooling operations. Contact the factory for application assistance. Pumps are not self-priming, lack a suction lift, and thus require a flooded suction. Pumps cannot be run dry.


MODEL ABBREVIATIONS: SS: 304 Stainless steel

ELECTRICAL: Models have air cooled motors with a junction box for electrical connections.

INSTALLATIONS: Pumps should be installed with the pump housing arrow pointing in the direction of flow within the system. If the arrow indicating flow is not in the direction required, remove the socket head housing screws holding the housing to the motor bracket and rotate the housing assembly as required. Replace the screws and tighten. The pump is composed of a wet end assembly which can be separated by unscrewing the socket head housing screws. The pump will then separate into 2 parts. The liquid will be contained within the wet end assembly unless the flat head connecting screws on the rear housing are loosened.


GENERAL SAFETY INFORMATION: Follow all local safety codes & the Occupational Safety and Health Act (OSHA). Make certain that the power source conforms to the requirements of your equipment. Always disconnect power source before performing any work on or near the electric motor. Caution must be exercised to relieve any pressure in the system & in draining hot liquid from the pump or the system.

DISASSEMBLY AND REASSEMBLY: The motor can be removed from the wet end assembly without draining the liquid from the system. To do so remove four socket head housing screws and slide the motor assembly away. If parts inside the wet end assembly must be removed, isolate the pump or drain the system. When the system is drained and cool, remove the four flat head connecting screws from the rear of the housing. The rear housing can now be removed. Remaining pump parts can be removed. Replace any worn or damaged parts. Replace the gasket anytime the rear housing is removed.

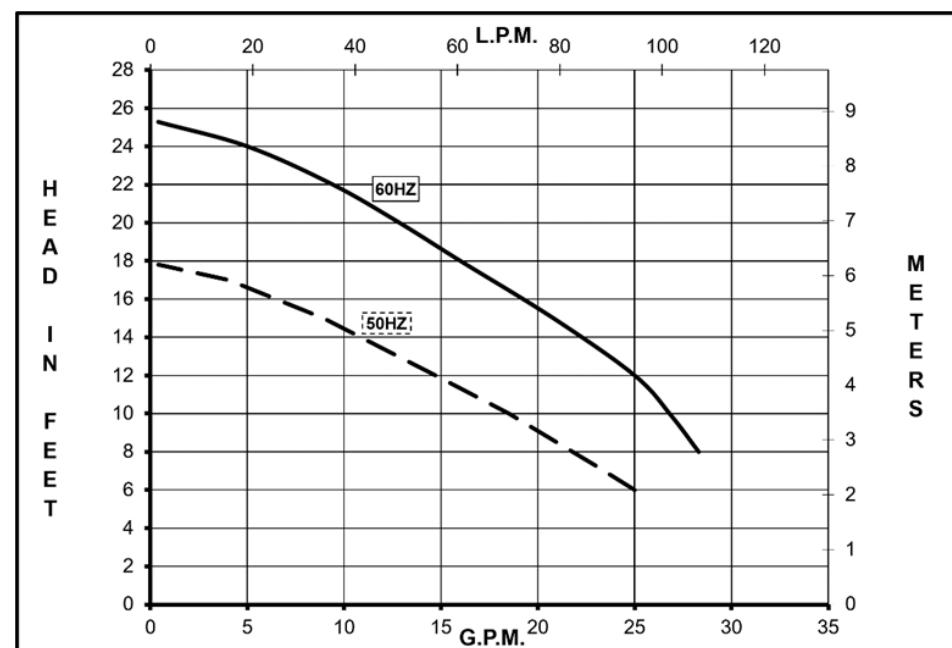

Specifications		830-SS-T
Product	1Ph	0175-0093-0100
Inlet-Outlet		3/4" FPT-3/4" FPT
Max Internal Pressure		150PSI (1034 kPa)
Max Liquid Temperature		250F (121C)

	60Hz										50Hz									
	Max Flow		Max Head			Electrical					Max Flow		Max Head			Electrical				
Model	GPM	LPM	FT	PSI	M	Ph	V	A	HP	kW	GPM	LPM	Feet	PSI	M	Ph	V	A	HP	kW
830-SS-T	27	102.2	25.3	10.9	7.7	1	115/230	2.7/1.4	1/5	0.149	25	94.6	17.8	7.7	5.4	1	115/230	2.9/1.4	1/5	0.149

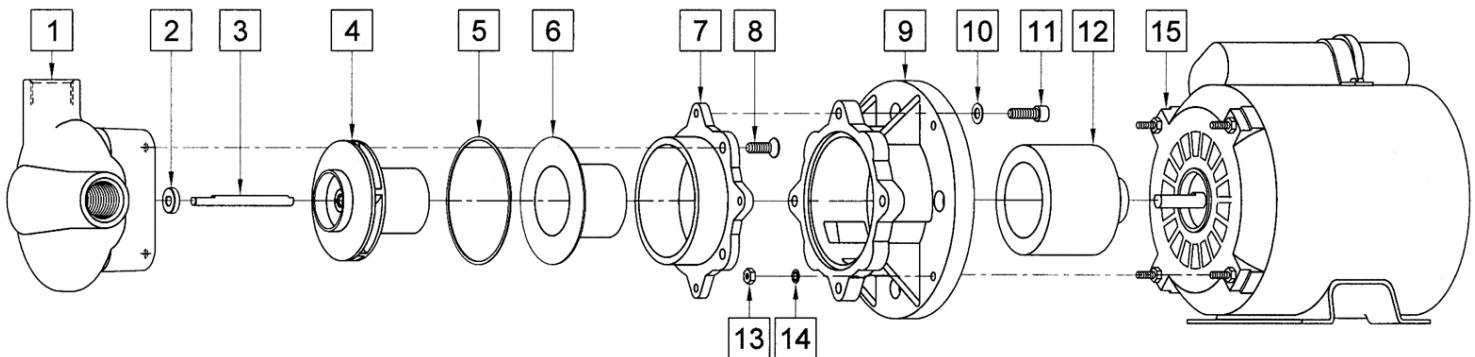

830-SS-T

1	0821-0112-0010	1	3/4" Threaded Pump Housing (304 Stainless Steel)
2	0821-0079-1000	1	Thrust Washer (Ceramic)
3	0821-0036-1000	1	Shaft (303 Stainless Steel)
4	0175-0073-0200	1	Impeller w/Bushing (Ryton/Teflon/Carbon) and Magnet Shell (304 Stainless Steel)
5	1043-0002-1000	1	2.873"ID x 0.047" Thick Gasket (Nitrile/Fibre)
6	0821-0035-0100	1	Rear Housing (304 Stainless Steel)
7	0821-0044-0001	1	Housing Connecting Ring (Aluminum)
8	1043-0009-1000	4	1/4"-20 x 3/4" Lg. Flat Head Connecting Screw (Steel)
9	0175-0027-1000	1	Motor Bracket (Plastic)
10	0155-0021-1000	4	1/2"OD Washer (Stainless)
11	0804-0052-1000	4	1/4"-20 x 3/4" LG. Socket Head Housing Screw (Steel)
12	0151-0061-0200	1	Drive Magnet
13	0410-0039-1000	4	#8-32 Hex Nut (Nickel Plated Brass)
14	0620-0010-1000	4	#8 Lock Washer (Stainless)
15	0175-0087-1000	1	Motor, 1Ph, 115/230V, 50/60Hz

Materials in contact with the liquid:

830-SS-T: 304SS, Ceramic, Nitrile/Fibre, 303SS, Ryton/Teflon/Carbon

NOTE: Contact Factory for other materials and/or parts not listed.

Special voltage motors are available upon special order.

WARRANTY: <https://www.marchpump.com/about/warranty/>